



JP7  
39  
40  
FOX

SX16 EXPANDER  
2  
1  
10  
9

EXPANDER 1  
2  
1  
10  
9  
JP3

EXPANDER 2  
2  
1  
10  
9  
JP10

EXPANDER 3  
2  
1  
10  
9  
JP9

EXPANDER 4  
2  
1  
10  
9  
JP8

LCD EXPANDER  
2  
1  
10  
9  
JP11

R12

D1

U1

1  
5

C1  
C2  
C3  
C4

U3

Y1

D2  
R4  
R3  
R9

C9  
C7

U5  
R10  
R11  
E1  
ANT

S3  
S4  
RFTX

DS5  
C8

U8

C2  
C5

JP1  
S1

DS1  
L1  
L2  
L3  
R5  
R6  
R7  
R8

J1  
U4  
9  
6

DS4

JP5  
2  
1  
16  
15

U2  
1  
BX 24

JP4  
8  
1

Reset  
S2  
R2  
R1

JP6  
39  
40  
1  
2

W1  
JP2  
1  
2  
10  
9  
BX24 Programmer

M2  
ATN

SX18  
R.1.1.1

